


Figure A

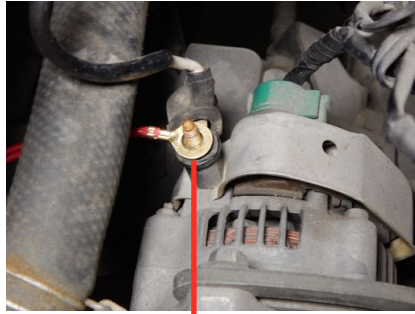

Alternator Output Terminal

Alternator Output Terminal (or Positive Terminal of the Battery)

Passenger Side Headlight

Relays: Mount or zip-tie to inner fender or firewall.

Route and secure wires in a safe and secure way.

Connect to Chassis Ground -(Any unpainted part of engine or body)

Connect to Chassis Ground -(Any unpainted part of engine or body)

Plug into passenger side OEM Female Headlight Connector

Fuses: Mount or zip-tie to inner fender or firewall.

Driver Side Headlight



OEM Passenger Side Female Headlight Connector