

2007-Present Toyota Tundra Airbag Brackets - With LRT Lift (SKU# LR-FAB)

Installation Instructions



CAUTION: Safety glasses should be worn at all times when working with vehicles and related tools and equipment.



Suggested Tools:

- 9/16 socket and ratchet.
- 9/16 box end wrench
- Foot-Pound Torque Wrench



Note

These brackets can be installed either before or after the Firestone Ride Rite Air Bags have been installed. To keep things simple we made these instructions for installing the brackets on the lower air bag mount before the air bag kit was installed on the vehicle.

Firestone Lower
Air Bag Mount



Bracket

Step 1

Obtain the Lower air bag mount from the Firestone Ride Rite Air Bags Kit.

Step 2

Align the holes in the bracket with the holes in the lower air bag mount as shown.



Step 3

Install the (4) bolts and washers supplied with the bracket.

Step 4

Install the washers and nuts as shown.





Step 5

Using a 9/16 box end wrench, hold the bolt. Then snug the nuts using a 9/16 socket and ratchet. Finish tightening the nuts by torquing them to 33 ft. lbs.




Step 7

These brackets can also be installed after the air bags have been installed. If needed, the instructions for the air bags are supplied with the Firestone Ride Rite Helper Springs/Air Bag Kit. This product can be seen/purchased on our web site by clicking [HERE](#).

Step 6

Repeat steps 1 through 5 on the second air bag support to be used on the other side of the vehicle.

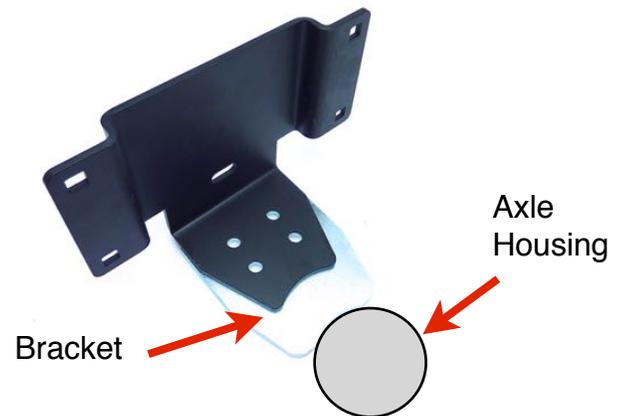

Caution:

These brackets are designed to fit firmly against the axle housing. If they do not, you will need to unbolt them, turn them around (180°) and reinstall them.



As always, If you experience any difficulty during the installation of this product please contact Low Range Off-Road Technical Support at 801-805-6644 M-F 8am-5pm MST. Thank you for purchasing from Low Range Off-Road.



These instructions are designed as a general installation guide. Installation of many Low Range Off-Road products require specialized skills such as metal fabrication, welding and mechanical trouble shooting. If you have any questions or are unsure about how to proceed, please contact our shop at 801-805-6644 or seek help from a competent fabricator. Using fabrication tools such as welders, torches and grinders can cause serious bodily harm and death. Please operate equipment carefully and observe proper safety procedures.

Rock crawling and off-road driving are inherently dangerous activities. Some modifications will adversely affect the on-road handling characteristics of your vehicle. All products sold by Low Range Off-Road are sold for off road use only. Any other use or application is the responsibility of the purchaser and/or user. Some modifications and installation of certain aftermarket parts may under certain circumstances void your original dealer warranty. Modification of your vehicle may create dangerous conditions, which could cause roll-overs resulting in serious bodily injury or death. Buyers and users of these products hereby expressly assume all risks associated with any such modifications and use.

Revised 06/21/12© Copyright 2012 Low Range Off-Road, LC All Rights Reserved

